

**PREMIUM MAINTENANCE
EVERY 3,750 Miles**

3

- Replace engine oil and filter.
- Install Premium Engine Protection.**
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect exhaust system.
- Check battery condition.
- Install Fuel System Cleaner.**
- Check all exterior lights.

\$49.95

**BASIC MAINTENANCE
EVERY 3,750 Miles**

3

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect exhaust system.
- Check battery condition.
- Check all exterior lights.

\$32.95

**PREMIUM MAINTENANCE
EVERY 7,500 MILES**

15

10

- Replace engine oil and filter.
- Install Premium Engine Protection.**
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check/adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Install Fuel System Cleaner.**
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Check battery condition.
- Check all exterior lights.

***4WD
AT 1st 7,500
Change VTM4
\$216.95
All others
\$146.95**

**BASIC MAINTENANCE
EVERY 7,500 MILES**

15

10

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Check/adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect front and rear brakes.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Check battery condition.
- Check all exterior lights.

***4WD
AT 1st 7,500
Change VTM4
\$199.95
All others
\$129.95**

**PREMIUM MAINTENANCE
AT 15,000 - 45,000 - 75,000 MILES**

19

24

- Replace engine oil and filter.
- Install Premium Engine Protection.**
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Perform fuel system cleaning service.**
- Inspect drive shaft boots.
- Replace engine air filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Inspect exterior lights.
- Check battery condition.

***4WD
Change VTM4
\$379.95**

***2WD
\$299.95**

**BASIC MAINTENANCE
AT 15,000 - 45,000 - 75,000 MILES**

13

18

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Replace engine air filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Inspect exterior lights.
- Check battery condition.

***4WD
Change VTM4
\$269.95**

***2WD
\$189.95**

**PREMIUM MAINTENANCE
EVERY 30,000 Miles**

31

36

- Replace engine oil and filter.
- Install Premium Engine Protection.**
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Perform fuel system cleaning service.**
- Inspect drive shaft boots.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Check battery condition.
- Replace transmission fluid.

***4WD
Change VTM4
\$589.95**

***2WD
\$499.95**

**BASIC MAINTENANCE
EVERY 30,000 Miles**

25

30

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Check battery condition.
- Replace transmission fluid.

***4WD
Change VTM4
\$479.95**

***2WD
\$399.95**

**PREMIUM MAINTENANCE
AT 105,000 Miles**

23

28

- Replace engine oil and filter.
- Install Premium Engine Protection.**
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Install Fuel System Cleaner.**
- Inspect drive shaft boots.
- Replace engine air filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Inspect exterior lights.
- Check battery condition.
- Replace spark plugs.

***4WD
Change VTM4
\$536.95**

***2WD
\$456.95**

**BASIC MAINTENANCE
AT 105,000 Miles**

23

28

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Replace engine air filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Inspect exterior lights.
- Check battery condition.
- Replace spark plugs.

***4WD
Change VTM4
\$519.95**

***2WD
\$439.95**