

**PREMIUM MAINTENANCE
EVERY 3,750 Miles**

3

- Replace engine oil and filter.
- Install Premium Engine Protection.**
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect exhaust system.
- Check battery condition.
- Install Fuel System Cleaner.**
- Check all exterior lights.

\$61.95

**BASIC MAINTENANCE
EVERY 3,750 Miles**

3

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect exhaust system.
- Check battery condition.
- Check all exterior lights.

\$44.95

**PREMIUM MAINTENANCE
EVERY 7,500 MILES**

1

- Replace engine oil and filter.
- Install Premium Engine Protection.**
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check/adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Install Fuel System Cleaner.**
- Inspect drive shaft boots.
- Check battery condition.
- Check all exterior lights.

\$156.95

**BASIC MAINTENANCE
EVERY 7,500 MILES**

1

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Check/adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect front and rear brakes.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Check battery condition.
- Check all exterior lights.

\$139.95

**PREMIUM MAINTENANCE
AT 15,000 - 45,000 - 75,000 MILES**

24

- Replace engine oil and filter.
- Install Premium Engine Protection.**
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Perform fuel system cleaning service.**
- Inspect drive shaft boots.
- Replace engine air filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Inspect exterior lights.
- Check battery condition.
- Replace rear differential fluid.

\$399.95

**BASIC MAINTENANCE
AT 15,000 - 45,000 - 75,000 MILES**

18

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Replace engine air filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Inspect exterior lights.
- Check battery condition.
- Replace rear differential fluid.

\$289.95

**PREMIUM MAINTENANCE
AT 105,000 Miles**

34

- Includes all services performed in the PREMIUM 15,000 MILE service plus the following:
- Replace spark plugs.

\$669.95

**PREMIUM MAINTENANCE
AT 30,000 Miles**

31

- Replace engine oil and filter.
- Install Premium Engine Protection.**
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Perform fuel system cleaning service.**
- Inspect drive shaft boots.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Check battery condition.
- Replace rear differential fluid.

\$499.95

**BASIC MAINTENANCE
30,000 Miles**

25

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Check battery condition.
- Replace rear differential fluid.

\$399.95

**BASIC MAINTENANCE
AT 105,000 Miles**

28

- Includes all services performed in the BASIC 15,000 MILE service plus the following:
- Replace spark plugs.

\$569.95

**PREMIUM MAINTENANCE
AT 60,000 - 90,000 - 120,000 Miles**

36

- Replace engine oil and filter.
- Install Premium Engine Protection.**
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Perform fuel system cleaning service.**
- Inspect drive shaft boots.
- Replace brake fluid.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Replace transmission fluid.
- Check battery condition.
- Replace rear differential fluid.

\$599.95

**BASIC MAINTENANCE
AT 60,000 - 90,000 - 120,000 Miles**

30

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Replace brake fluid.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Replace transmission fluid.
- Check battery condition.
- Replace rear differential fluid.

\$499.95