

| | | | | | | | | | | | | |
|--------------------------------|--------|--------|--------|--------|--------|--------|--------|---------|---------|---------|---------|---------|
| MILEAGE INTERVAL SERVICE GUIDE | 5,000 | 10,000 | 15,000 | 20,000 | 25,000 | 30,000 | 35,000 | 40,000 | 45,000 | 50,000 | 55,000 | 60,000 |
| | 65,000 | 70,000 | 75,000 | 80,000 | 85,000 | 90,000 | 95,000 | 100,000 | 105,000 | 110,000 | 115,000 | 120,000 |

PREMIUM MAINTENANCE EVERY 5,000 Miles 3

- Replace engine oil and filter.
- Install Premium Engine Protection.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect exhaust system.
- Check battery condition.
- Install Fuel System Cleaner.
- Check all exterior lights.

\$53.95
* 15K - 45K
75K - 105K
Replace Air Filter
\$116.95 5

BASIC MAINTENANCE EVERY 5,000 Miles 3

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect exhaust system.
- Check battery condition.
- Check all exterior lights.

\$34.95
* 15K - 45K
75K - 105K
Replace Air Filter
\$97.95 5

PREMIUM MAINTENANCE 10,000-50,000-70,000 MILES 10

- Replace engine oil and filter.
- Install Premium Engine Protection.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check/adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Install Fuel System Cleaner.
- Inspect drive shaft boots.
- Check battery condition.
- Check all exterior lights.

\$153.95

BASIC MAINTENANCE 10,000-50,000-70,000 MILES 10

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Check/adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect front and rear brakes.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Check battery condition.
- Check all exterior lights.

\$134.95

PREMIUM MAINTENANCE 20,000-40,000-80,000-100,000 MILES 17

- Replace engine oil and filter.
- Install Premium Engine Protection.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Perform fuel system cleaning service.
- Inspect drive shaft boots.
- Inspect engine air filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Inspect exterior lights.
- Check battery condition.

\$259.95

BASIC MAINTENANCE 20,000-40,000-80,000-100,000 MILES 11

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Inspect engine air filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Inspect exterior lights.
- Check battery condition.

\$149.95

PREMIUM MAINTENANCE AT 110,000 Miles 25

- Includes all services performed in the PREMIUM 10,000 MILE service plus the following:
- Replace spark plugs.
- Inspect and adjust valves.

\$438.95

PREMIUM MAINTENANCE AT 30,000 and 90,000 Miles 26 31

- Replace engine oil and filter.
- Install Premium Engine Protection.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Perform fuel system cleaning service.
- Inspect drive shaft boots.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Check battery condition.
- Replace transmission fluid (@ 90,000 miles.)

\$419.95
30,000 Miles

\$509.95
90,000 Miles

BASIC MAINTENANCE 30,000 and 90,000 Miles 20 25

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Check battery condition.
- Replace transmission fluid (@ 90,000 miles.)

\$309.95
30,000 Miles

\$399.95
90,000 Miles

BASIC MAINTENANCE AT 110,000 Miles 25

- Includes all services performed in the BASIC 10,000 MILE service plus the following:
- Replace spark plugs.
- Inspect and adjust valves.

\$419.95

PREMIUM MAINTENANCE AT 60,000 and 120,000 Miles 36 41

- Replace engine oil and filter.
- Install Premium Engine Protection.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Perform fuel system cleaning service.
- Inspect drive shaft boots.
- Replace brake fluid.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Replace transmission fluid.
- Check battery condition.
- Flush cooling system (@ 120,000 miles only)

\$564.95
60,000 Miles

\$644.95
120,000 Miles

BASIC MAINTENANCE 60,000 and 120,000 Miles 30 35

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Replace brake fluid.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Replace transmission fluid.
- Check battery condition.
- Flush cooling system (@ 120,000 miles only)

\$454.95
60,000 Miles

\$534.95
120,000 Miles