

MILEAGE INTERVAL SERVICE GUIDE	5,000	10,000	15,000	20,000	25,000	30,000	35,000	40,000	45,000	50,000	55,000	60,000
	65,000	70,000	75,000	80,000	85,000	90,000	95,000	100,000	105,000	110,000	115,000	120,000

PREMIUM MAINTENANCE EVERY 5,000 Miles 3

- Replace engine oil and filter.
- Install Premium Engine Protection.**
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect exhaust system.
- Check battery condition.
- Install Fuel System Cleaner.**
- Check all exterior lights.

\$53.95
* 15K - 45K
75K - 105K
Replace Air Filter
\$118.95 5

BASIC MAINTENANCE EVERY 5,000 Miles 3

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect exhaust system.
- Check battery condition.
- Check all exterior lights.

\$34.95
* 15K - 45K
75K - 105K
Replace Air Filter
\$99.95 5

PREMIUM MAINTENANCE 10,000-50,000-70,000 MILES 10

- Replace engine oil and filter.
- Install Premium Engine Protection.**
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check/adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Install Fuel System Cleaner.**
- Inspect drive shaft boots.
- Check battery condition.
- Check all exterior lights.

\$158.95

BASIC MAINTENANCE 10,000-50,000-70,000 MILES 10

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Check/adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect front and rear brakes.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Check battery condition.
- Check all exterior lights.

\$139.95

PREMIUM MAINTENANCE 20,000-40,000-80,000-100,000 MILES 17

- Replace engine oil and filter.
- Install Premium Engine Protection.**
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Perform fuel system cleaning service.**
- Inspect drive shaft boots.
- Inspect engine air filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Inspect exterior lights.
- Check battery condition.

\$259.95

BASIC MAINTENANCE 20,000-40,000-80,000-100,000 MILES 11

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Inspect engine air filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Inspect exterior lights.
- Check battery condition.

\$149.95

PREMIUM MAINTENANCE AT 110,000 Miles 25

- Includes all services performed in the PREMIUM 10,000 MILE service plus the following:
- Replace spark plugs.
- Inspect and adjust valves.

\$438.95

PREMIUM MAINTENANCE AT 30,000 and 90,000 Miles 26
31

- Replace engine oil and filter.
- Install Premium Engine Protection.**
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Perform fuel system cleaning service.**
- Inspect drive shaft boots.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Check battery condition.
- Replace transmission fluid (@ 90,000 miles.)

\$444.95
30,000 Miles

\$529.95
90,000 Miles

BASIC MAINTENANCE 30,000 and 90,000 Miles 20
25

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Check battery condition.
- Replace transmission fluid (@ 90,000 miles.)

\$334.95
30,000 Miles

\$419.95
90,000 Miles

BASIC MAINTENANCE AT 110,000 Miles 25

- Includes all services performed in the BASIC 10,000 MILE service plus the following:
- Replace spark plugs.
- Inspect and adjust valves.

\$419.95

PREMIUM MAINTENANCE AT 60,000 and 120,000 Miles 36
41
41
46

- Replace engine oil and filter.
- Install Premium Engine Protection.**
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Perform fuel system cleaning service.**
- Inspect drive shaft boots.
- Replace brake fluid.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Replace transmission fluid
- Check battery condition.
- Flush cooling system (@ 120,000 miles only.)
- Replace rear differential fluid (4WD only.)

2WD \$589.95
4WD \$669.95
60,000 Miles

2WD \$659.95
4WD \$739.95
120,000 Miles

BASIC MAINTENANCE 60,000 and 120,000 Miles 30
35
35
40

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Replace brake fluid.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Replace transmission fluid.
- Check battery condition.
- Flush cooling system (@ 120,000 miles only.)
- Replace rear differential fluid (4WD only.)

2WD \$479.95
4WD \$559.95
60,000 Miles

2WD \$549.95
4WD \$629.95
120,000 Miles