

MILEAGE	3,750	7,500	11,250	15,000	18,750	22,500	26,250	30,000	33,750	37,500	41,250	45,000	48,750	52,500	56,250	60,000
INTERVAL																
SERVICE	63,750	67,500	71,250	75,000	78,750	82,500	86,250	90,000	93,750	97,500	101,250	105,000	108,750	112,500	116,250	120,000
GUIDE																

PREMIUM MAINTENANCE EVERY 3,750 Miles

3

- Replace engine oil and filter.
- Install Premium Engine Protection.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect exhaust system.
- Check battery condition.
- Install Fuel System Cleaner.
- Check all exterior lights.

\$73.95

BASIC MAINTENANCE EVERY 3,750 Miles

3

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect exhaust system.
- Check battery condition.
- Check all exterior lights.

\$54.95

PREMIUM MAINTENANCE EVERY 7,500 MILES

1

- Replace engine oil and filter.
- Install Premium Engine Protection.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check/adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Install Fuel System Cleaner.
- Inspect drive shaft boots.
- Check battery condition.
- Check all exterior lights.

\$164.95

BASIC MAINTENANCE EVERY 7,500 MILES

1

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Check/adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect front and rear brakes.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Check battery condition.
- Check all exterior lights.

\$139.95

PREMIUM MAINTENANCE AT 15,000 - 45,000 - 75,000 MILES

24

- Replace engine oil and filter.
- Install Premium Engine Protection.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Perform fuel system cleaning service.
- Inspect drive shaft boots.
- Replace engine air filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Inspect exterior lights.
- Check battery condition.
- Replace rear differential fluid.

\$429.95

BASIC MAINTENANCE AT 15,000 - 45,000 - 75,000 MILES

18

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Replace engine air filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Inspect exterior lights.
- Check battery condition.
- Replace rear differential fluid.

\$309.95

PREMIUM MAINTENANCE AT 105,000 Miles

34

- Includes all services performed in the PREMIUM 15,000 MILE service plus the following:
- Replace spark plugs.

\$579.95

PREMIUM MAINTENANCE AT 30,000 Miles

31

- Replace engine oil and filter.
- Install Premium Engine Protection.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Perform fuel system cleaning service.
- Inspect drive shaft boots.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Check battery condition.
- Replace rear differential fluid.

\$539.95

BASIC MAINTENANCE 30,000 Miles

25

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Check battery condition.
- Replace rear differential fluid.

\$429.95

BASIC MAINTENANCE AT 105,000 Miles

28

- Includes all services performed in the BASIC 15,000 MILE service plus the following:
- Replace spark plugs.

\$469.95

PREMIUM MAINTENANCE AT 60,000 - 90,000 - 120,000 Miles

36

- Replace engine oil and filter.
- Install Premium Engine Protection.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Perform fuel system cleaning service.
- Inspect drive shaft boots.
- Replace brake fluid.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Replace transmission fluid.
- Check battery condition.
- Replace rear differential fluid.

\$609.95

BASIC MAINTENANCE AT 60,000 - 90,000 - 120,000 Miles

30

- Replace engine oil and filter.
- Complete chassis lubrication.
- Check and top off all fluids.
- Inspect front and rear brakes.
- Check and adjust parking brake.
- Inspect brake hoses.
- Rotate tires and adjust tire pressures.
- Inspect tie rod ends, gear box & boots.
- Inspect exhaust system.
- Inspect suspension.
- Inspect drive shaft boots.
- Replace brake fluid.
- Replace engine air filter.
- Replace dust and pollen filter.
- Inspect fuel lines.
- Inspect underbody.
- Inspect cooling system and hoses.
- Replace transmission fluid.
- Check battery condition.
- Replace rear differential fluid.

\$499.95